

# RV200V – Voice Module User’s Manual

## 1. RV200V – Voice Module

- a. Set “JP” off and then insert the Connection on the main board (such as GUARD8).
- b. Press “Record” button to record for 20 seconds. After pressing the “Record” button, the red LED will flashing and last for 20 seconds. Press “Play” for testing is only for manufacture engineer.

## 2. Main Board

You should program the control panel when using the voice module as following:

- a. Set Follow-Me Phone Numbers:

Set Follow-Me Phone NO.1	[*]+[7]+[1]+[MASTER CODE]+Phone NO.+[#]
Set Follow-Me Phone NO.2	[*]+[7]+[2]+[MASTER CODE]+Phone NO.+[#]
Set Follow-Me Phone NO.3	[*]+[7]+[3]+[MASTER CODE]+Phone NO.+[#]
Set Follow-Me Phone NO.4	[*]+[7]+[4]+[MASTER CODE]+Phone NO.+[#]

- b. Enter the Installer Programming Mode.  
Enter the Installer Code [#][0206] (factory default) for GUARD8.
- c. Press [2][6][ARM] to access the correct Location "26".
- d. Enter a Attempts Code [4][8]  
Enter [4] [8] [#]
- e. Exit programming:  
Enter the Installer Code [0206] [ARM] (factory default) for GUARD8.

The control panels will be dialling automatically when in alarm. And you will be able to hear your recording through the follow-me numbers. The voice module will play the recording three times. And the red LED will be blinking when the module playing.

